

MID WEST PRODUCTS, INC.

LOG CART – MODEL LC-R08



Owner's Manual and Parts List

SAVE THIS MANUAL

You will need this manual for the safety instructions, assembly instructions and parts list. Put it in a safe, dry place for future reference.

Additional Information/Link to PDF Copy of this Manual:



WARNING

 
 

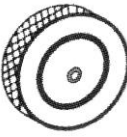 



 
 
- Read instructions and Warnings before set up and use.
- Check to insure product is not damaged prior to use. If product is damaged, do not use.
- Do not exceed cart's weight capacity of 200 lb.
- Do not exceed each tire's maximum permissible inflation pressure of 30 psi.
- Only use product as intended. Do not attempt to jump or stand on product.
- Not for use by unsupervised children.

Log Cart – Model LC-R08

- Please read and understand these Instructions before assembling your Log Cart.
- Check that you have all components.
- Screwdriver and Wrench required for assembly.

Assembly Instructions:

Step 1: Insert Wheel Axle (#5) between the two Side Frames (#3).

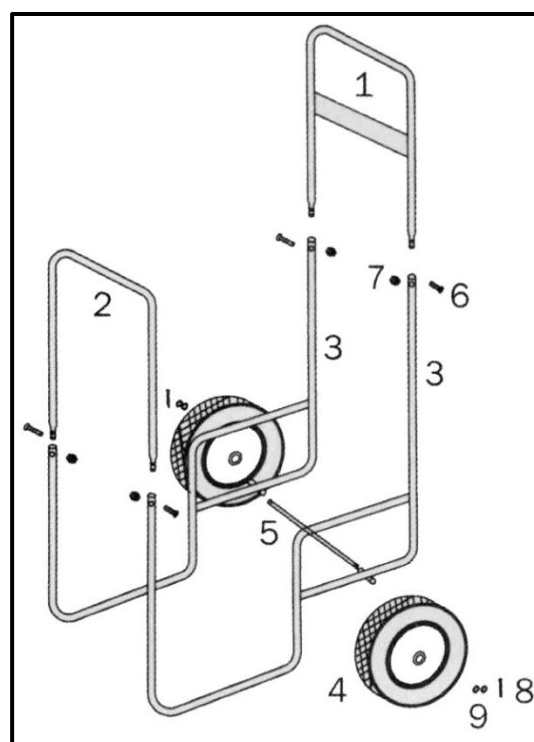 
Key	Part No.	Description	Image	Qty
1	52-0001	Handle		1
2	52-0002	Front		1
3	52-0003	Sides		2
4	52-0004	Wheel & Tire		2
5	52-0005	Axle		1
6	52-0006	Bolt		4
7	52-0007	Nut		4
8	52-0008	Cotter Pin		2
9	52-0009	Washer		4

Step 2: Attach one Wheel (#4) on each side of the Axle (#5) and secure with Washers (#9) and Cotter Pin (#8). One or two Washers (#9) may be used to obtain desired tightness.

Step 3: Attach Top Handle (#1) by inserting into the Side Frames (#3) above the Wheels.

Step 4: Attach Front Bar (#2) by inserting into opposite side of Side Frames (#3).

Step 5: Secure all parts by using Screws (#6) and Nuts (#7) as shown in the Diagram. Be sure to tighten all the Nuts.



INSTRUCTIONS FOR ORDERING PARTS

(Minimum Parts Order Charge \$20.00)

1. Address all parts orders or correspondence regarding customer service to one of the following:

Parts Dept.	Phone: (937) 337-3641
Mid West Products, Inc.	
P.O. Box 301	E-mail: Parts@Mid-West-Products-Inc.com
Phillipsburg, OH 45354	Website: www.Mid-West-Products-Inc.com
2. Write your name and address plainly (print or type).
3. Explain where and how to ship.
4. Give model number of unit.
5. Give part number from parts list, as well as a description, including color, of the part and the quantity you need.
6. Inspect all shipments you receive. If any parts are damaged or missing, file a claim with the carrier before accepting.
7. If you are returning parts, be sure to include WITH THE SHIPMENT a list of the parts with your name and address.
8. All orders for repair and replacement parts will be shipped when paid with Master Card, Visa, or personal check/money order. Prices subject to change without notice.